



GTEN Infinite v5 Series

LTE Modem Router

[Change WiFi Password](#)

To change Wifi password on the Infinite Tablet Modem/Router, follow the steps below:

1. Connect to the Network (2.4G, or 5G SSID) with the router (Default SSID is displayed on the sticker at the bottom of the router).
2. Enter the default Wifi password (The default WIFI password (WIFI key) is displayed on the sticker at the bottom of the router).
3. Make sure you are connected to the correct network (SSID). Pull up a web browser, e.g., Google Chrome, Firefox, Safari, Edge, or Explorer.
4. In the URL address bar (web address), type in 192.168.2.1, and press **Enter**, or "Return", on your keyboard. ***It is not necessary to enter "http://"**
5. You should be at the login page for the router settings. The default **username** and **password** for the router settings login is (in all lower case, for both):
admin
6. At the router's main page, on the left, under **Advanced Settings**, click on **Wireless 2.4GHz** link.
7. Find **WPA Pre-Shared Key**, within the Wireless 2.4GHz **General** tab; delete the existing WiFi Key (password), and enter your secure new password.
8. Once you have entered you new secure WiFi password, click **Apply** at the bottom of the page to save the password.
 - a. *Once you click **Apply**, devices will be disconnected from the network. All devices will need to reconnect with the network using the new WiFi password*
9. For 5GHz network band, repeat steps **#6 ~ #8**, using the **Wireless 5GHz** link.